


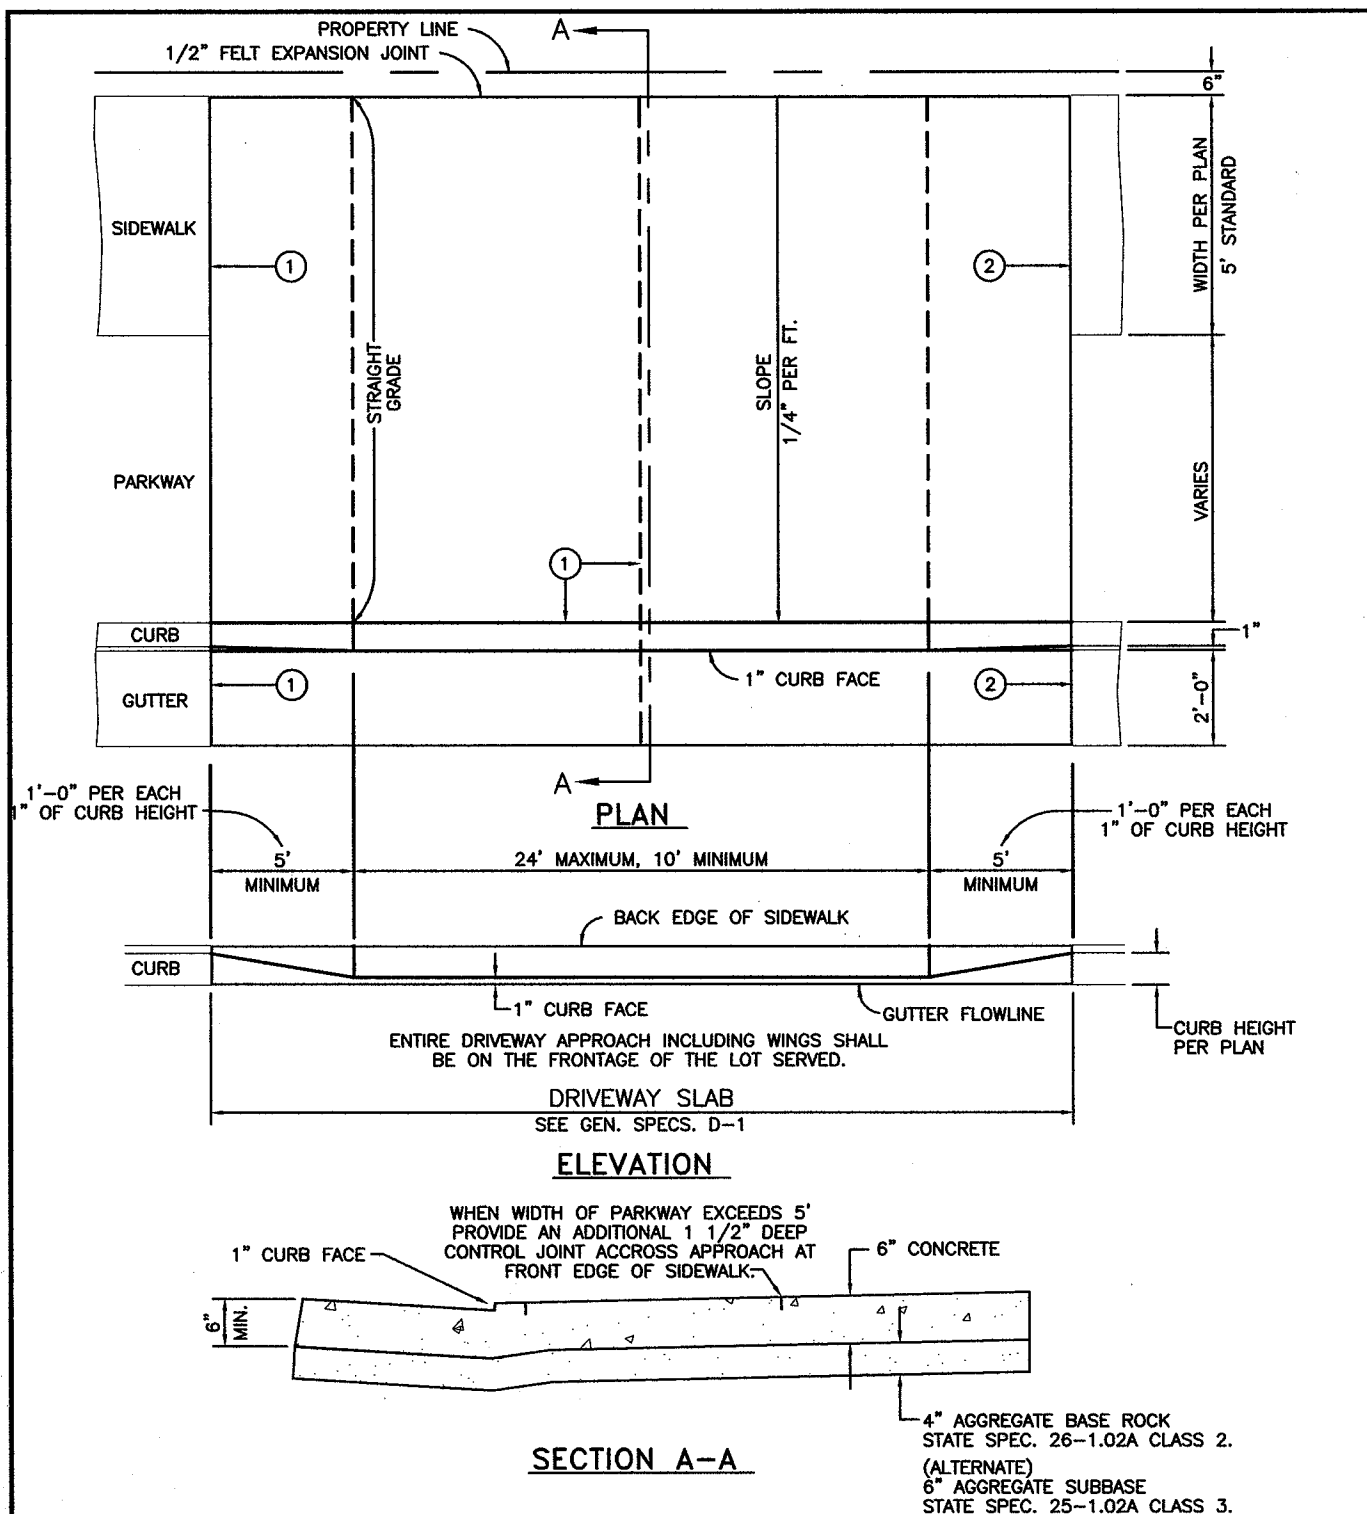

NOTES:

- ① IN NEW CONSTRUCTION, PLACE 1 1/2" DEEP CONTROL JOINT EACH SIDE OF DRIVEWAY AT BACK OF CURB LINE AND AT CENTERLINE OF APPROACH.
- ② IN EXISTING CURB, GUTTER AND SIDEWALK SAWCUT JOINT AT EACH SIDE OF DRIVEWAY APPROACH.
3. USE THIS STANDARD FOR SERVICE TO 3 DWELLINGS OR LESS.

ENGINEERING DEPARTMENT

CITY OF MERCED, CA.

RESIDENTIAL DRIVEWAY (STANDARD CURB)

DRAWN: KGE

APPROVED BY:

DATE

DATE: 4/05

David L. Tucker

4/4/06

REVISED: 12/05

CITY ENGINEER

D-2

SHEET

OF