


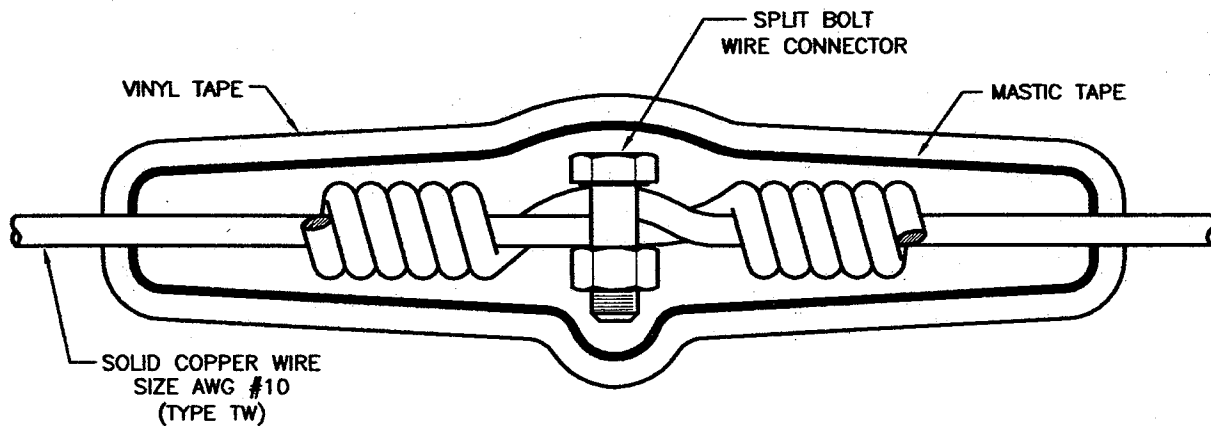

NOTES:

1. TWIST THE WIRE A MINIMUM OF FIVE (5) TIMES ON EACH END.
2. INSTALL SPLIT BOLT CONNECTOR.
3. COVER THE ENTIRE SPLICE WITH MASTIC TAPE WRAP.
4. WRAP MASTIC WITH VINYL TAPE.
5. WIRE SPLICES SHALL BE LOCATED WITHIN A VALVE BOX.

* SOLDERING MAY BE INCLUDED IN ADDITION TO THE ABOVE.

ENGINEERING DEPARTMENT		CITY OF MERCED, CA.	
TRACER WIRE SPLICE			W-16D
DRAWN: KGE	APPROVED BY: <i>David H. Tucker</i>	DATE: May 20 2002	
DATE: 1/02			
REVISED: 4/02	CITY ENGINEER		
			SHEET OF